

BINNI™ Sofa - Wearable beanbag

Please keep instructions for further reference



PLEASE SUPERVISE CHILDREN
PLAYING AT ALL TIME.

WARNING

- Nylon bags can be dangerous. To avoid risk of suffocation keep the bag away from babies and children.
- Allow use only on a level surface, preferably 2m (6ft) away from any structure or obstruction.
- Do not use near slopes, stairs, water or other hazards.

CARE

- The outer cover can be machine washed: remove outer cover, wash -- preferably separately -- 30°C (85°F), gentle cycle, tumble dry/dry in the shade.
- Check stitches and if any stitch is damaged, do not use until it is repaired.
- The zipper slides in the outer covers are purposely tucked into special pockets, for safety and prevention of unintentional opening. You may need a small hook to open them. After returning inner bags and zipping up the covers, tuck the slides back into the pockets.



for more products and further information visit our web site: www.MakingSns.com or contact us via Tel: +972-54-4470043

Raise above
your head




1

Push your head through the slot.




2

Pull down to comfortable
position.

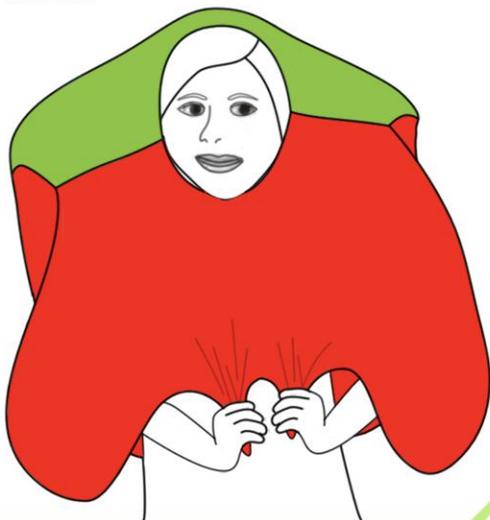

3

Have fun!

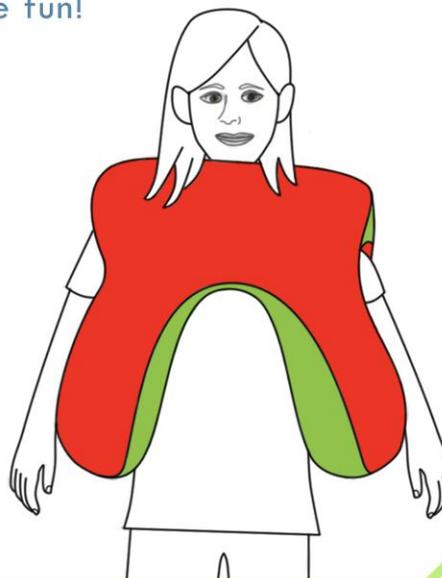

4